

INSTRUCTIONS

CAT. # 2A3-3 SINGLE INSTRUMENT


OUTSIDE AIR TEMPERATURE
-40 to +120 f.
FOR AIR. TEMP. USE 3990T sender

! IMPORTANT !

For lighting order light kit # 186

This unit has not been approved for use on type certified aircraft.

Connect sender ground to same ground point as pin #5

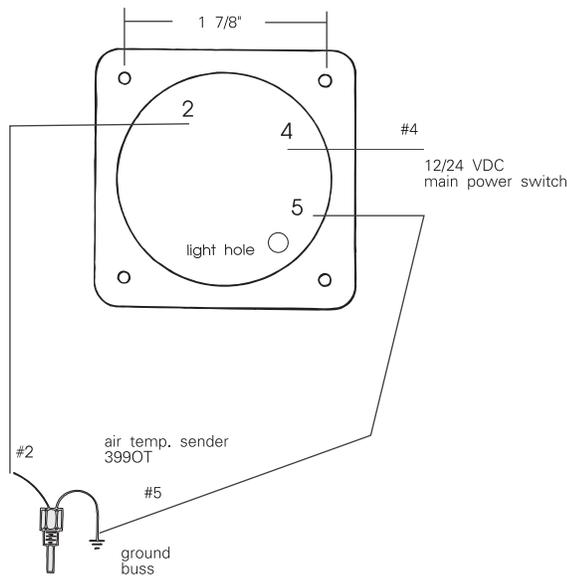

Install instrument in a 2 1/4 inch hole for behind panel or (2-1/16 inch hole for front panel). In convenient operating place at least 12 inches from compass. Use 4 corner screws to hold in place.

Install the air temp. sender into free air. (away from any heat source ie. exhaust pipes air flow from cowlings oil coolers etc.). Route wires away from spark plug wires and hot manifolds, support with wire ties every 12-15 inches. Use rubber grommets when going through metal.

On the rear of the instrument there are connecting pins with corresponding numbers.

Use patch cable provided to connect the instrument to the appropriate sender and power source. Connect pin #2 to either air temp. sender lead and connect remaining lead to the same ground point as pin #5. Connect pin #4 to main power switch. 12/24 volts D.C.

WARRANTY

WESTACH INSTRUMENTS are made with the highest quality material and workmanship. With reasonable care, instruments will give long and satisfactory service. WESTACH INSTRUMENTS are guaranteed against defective material and workmanship for 12 months from the manufacturing date. For complete details go to www.westach.com

WESTACH
©

WESTBERG MFG. INC.
www.westach.com