

# INSTRUCTIONS

## CAT. # 2C7-2 SINGLE INSTRUMENT


FUEL LEVEL GAUGE.  
RANGE E-F ( 0-30 ohm )

### ! IMPORTANT !

This gauge works with any 0-30 ohm float sender.

The gauge will work on 12/24 VDC.

For lighting, order light kit # 186

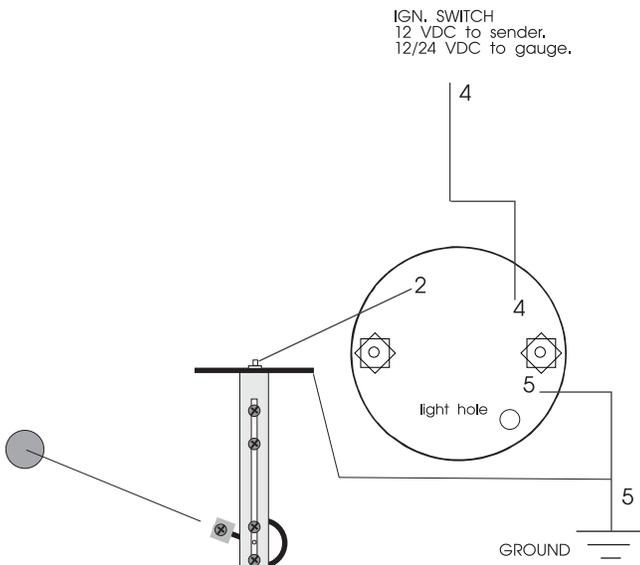

Install the instrument in a 2-1/16 hole, in convenient operating place. Use U clamp to hold in place.

Install fuel level sender into fuel tank as per fuel sender instructions. If sender calibration is required, do so before permanently installing fuel sender. Attach wires to sender and support with wire ties every 12-15 inches. Use rubber grommets when going through metal.

On the rear of the instrument there are connecting pins with corresponding numbers.

Use patch cable provided to connect the fuel sender to the instrument.

Connect pin #2 to the sender output wire. Connect pin #5 to ground. Connect pin #4 to 12/24 VDC. ( ign. switch ). See illustration.

Patch cable may be shortened or lengthened without affecting accuracy of unit. Using 20-22 gauge stranded wire is recommended.

### WARRANTY

WESTACH INSTRUMENTS are made with the highest quality material and workmanship. With reasonable care, instruments will give long and satisfactory service. WESTACH INSTRUMENTS are guaranteed against defective material and workmanship for 12 months from the manufacturing date. For complete details go to [www.westach.com](http://www.westach.com)

**WESTACH**  
©

**WESTBERG MFG. INC.**  
[www.westach.com](http://www.westach.com)