


INSTRUCTIONS

CAT. #254-4F 4 position

For switching CHT or EGT thermocouples.

CONNECT TO
INSTRUMENT.
SEE INSTRUMENT
INSTRUCTIONS

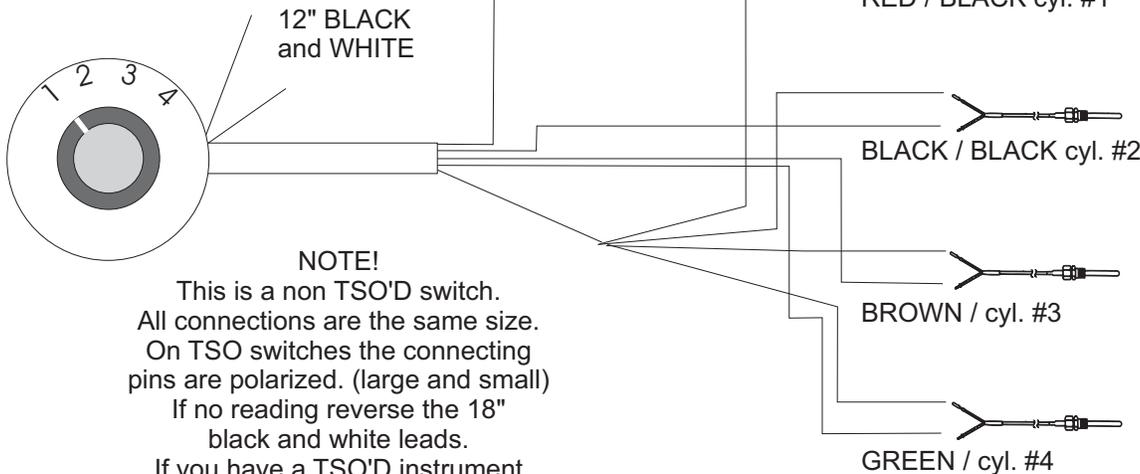

CAN BE USED
WITH EITHER
CHT or EGT
THERMOCOUPLES

PROBE TYPE
THERMOCOUPLES
SHOWN

Mount switch in 3/8" hole. Install numbered switch plate before installing nut. Make certain that the switch is in position #1 then align and tighten knob.

Route wires away from hot manifolds and pipes. Use wire ties every 18". Use grommets when going through metal.

Connect the 12" black and white leads from the switch to the instrument. Connect all the white sender and the white switch leads together. Connect the colored switch leads to the black sender leads. Cylinder #1 to red. Cylinder #2 to black. Cylinder #3 to brown. Cylinder #4 to green. See instrument instructions for proper connection to instrument.

NOTE!

All switch leads may be shortened as needed. Or may be lengthened up to 12' for a total of 20' without effecting calibration of instrument. (DO NOT CUT THERMOCOUPLE LEADS)

WARRANTY

WESTACH INSTRUMENTS are made with the highest quality material and workmanship. With reasonable care, instruments will give long and satisfactory service. WESTACH INSTRUMENTS are guaranteed against defective material and workmanship for 12 months from the manufacturing date. For complete details go to www.westach.com



WESTBERG MFG. INC.
www.westach.com