

INSTRUCTIONS

CAT. # 2A9-2 SINGLE INSTRUMENT

OIL TEMPERATURE
RANGE 100-260 f.

! IMPORTANT !


This gauge works with 399 series sender.

The gauge will work on 12/24 VDC.

For lighting, order light kit # 186

Connect sender and gauge ground to one ground point.

This unit has not been approved for type certified aircraft.

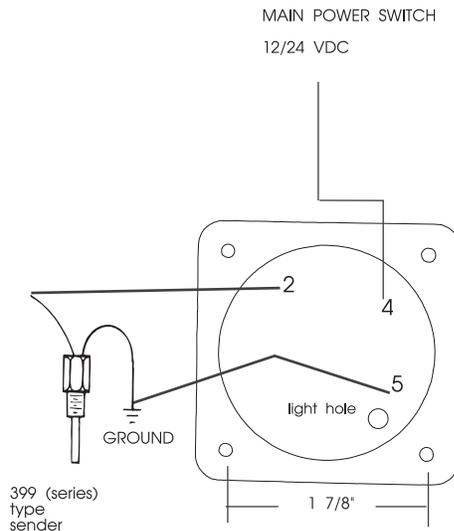

Install the instrument in a 2-1/4 inch hole for behind panel or (2-1/16 hole for in front of panel) in convenient operating place at least 12 inches from compass. Use four corner screws to hold in place.

Install temperature sender into medium to be measured. Attach wires to sender and support with wire ties every 12-15 inches. Use rubber grommets when going through metal.

On the rear of the instrument there are connecting pins with corresponding numbers.

Use patch cable provided to connect the temperature sender to the instrument. Connect pin #2 to one of the sender leads and ground the remaining lead to the same ground point as pin #5. Connect pin #5 to ground. Connect pin #4 to 12/24 VDC. (master power switch). See illustration.

Patch cable may be shortened or lengthened without affecting accuracy of unit. Using 20-22 gauge stranded wire is recommended.

WARRANTY

WESTACH INSTRUMENTS are made with the highest quality material and workmanship. With reasonable care, instruments will give long and satisfactory service. WESTACH INSTRUMENTS are guaranteed against defective material and workmanship for 12 months from the manufacturing date. For complete details go to www.westach.com



WESTBERG MFG. INC.
www.westach.com