


INSTRUCTIONS

CAT. #254-2FD dual 2 position

For switching CHT and EGT thermocouples.

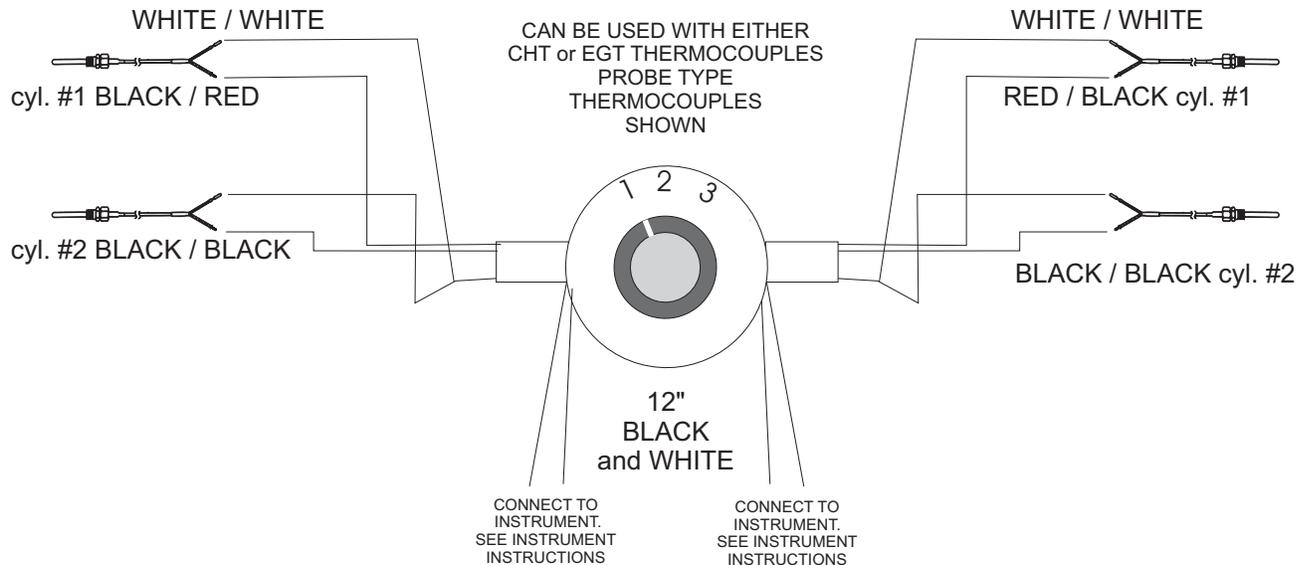

Mount switch in 3/8" hole. Install numbered switch plate before installing nut. Make certain that the switch is in position #1 then align and tighten knob.

Route wires away from hot manifolds and pipes. Use wire ties every 18". Use grommets when going through metal.

NOTE! There are two groups of wires on the switch. Keep each group separate

Connect one of the groups of white sender and the white switch leads together. Connect the 12" white lead to the instrument. Connect the colored switch leads to the black sender leads. Cylinder #1 to red. Cylinder #2 to black. See instrument instructions for proper connection to instrument.

Repeat procedure for other group of wires.

NOTE!

All switch leads may be shortened as needed. Or may be lengthened up to 12' for a total of 20' without effecting calibration of instrument. (DO NOT CUT THERMOCOUPLE LEADS)

WARRANTY

WESTACH INSTRUMENTS are made with the highest quality material and workmanship. With reasonable care, instruments will give long and satisfactory service. WESTACH INSTRUMENTS are guaranteed against defective material and workmanship for 12 months from the manufacturing date. For complete details go to www.westach.com



WESTBERG MFG. INC.
www.westach.com